



# Slot Drain SDiPS Pit connection



Cut a hole in the pit to suit a standard 90mm stormwater pipe.

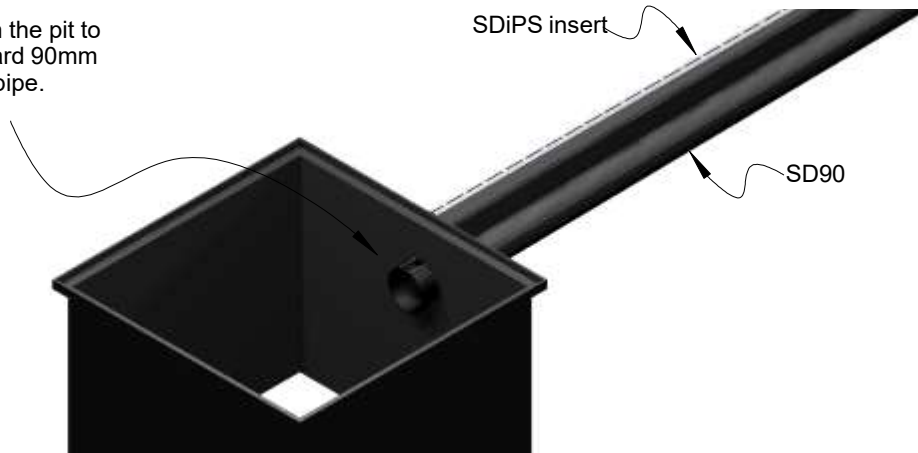

Cut back channel section of SD90 to allow pipe section to protrude into the pit.

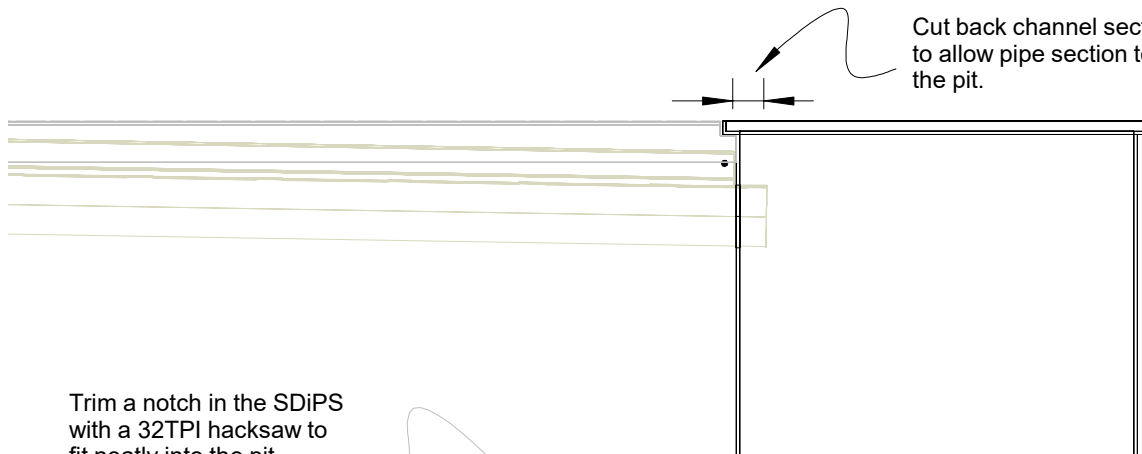

Trim a notch in the SDiPS with a 32TPI hacksaw to fit neatly into the pit. Do not use a grinder, cut cold.

